



Connection instructions for RJ45 socket cat. 5 Enhanced and cat.6:

cod. 44...29C5E - 44...29C6 (S44 unshielded version)
cod. 44...29C5ES - 44...29C6S (S44 shielded version)


cod. 45...29C5E - 45...29C6 (S45 unshielded version)
cod. 45...29C5ES - 45...29C6S (S45 shielded version)

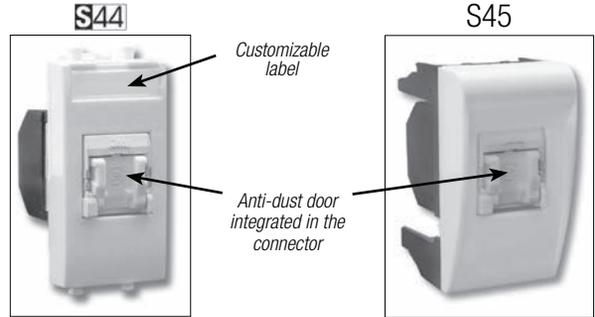



- 1) Strip cable jacket back for 30 mm at least.

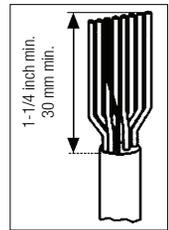


- 2) Open the protection by acting on the plastic clips and take the comb out.

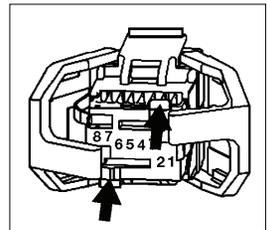

- 3) Insert the wires into the cable comb according to the chosen scheme (568A or B). Push the cable comb until the cable jacket. Cut off excess wire.

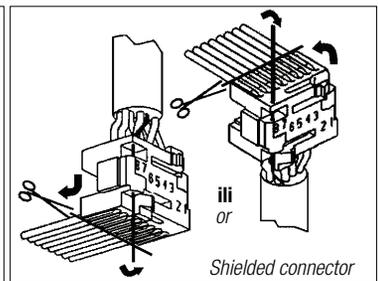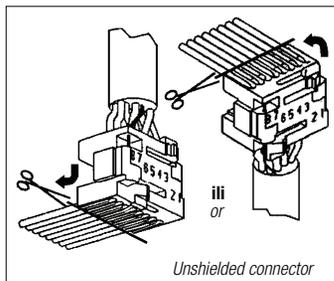


- 4) Insert the cable comb into the rear part of the socket.

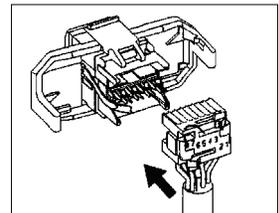




vedi AVVERTENZE
see NOTE

5) Close manually the clips through a light fingers pression.

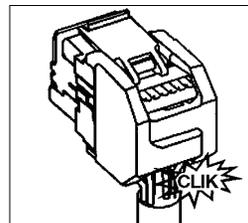


6) Hook the connector to the plastic cover

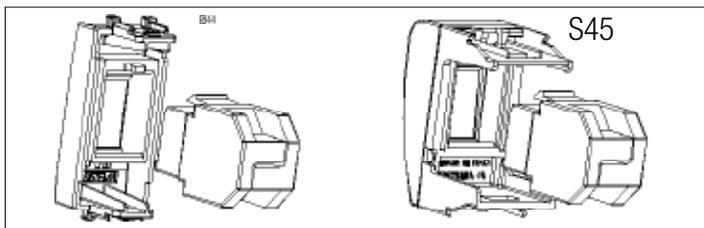

DISCONNECTION

a) Re-open the clips, insert a screw-driver in the slot and push the comb out.

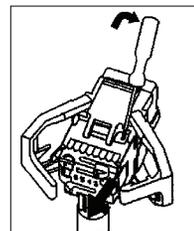

COLORS OF CONDUCTORS VALID FOR ALL SOCKETS

